YAMAHA RADIATOR GUARD INSTALLATION INSTRUCTIONS

1. Using an 8mm T-Handle or Socket, remove the seat bolt and take off the seat. (FIG 1)
2. Using an 8mm T-Handle or socket remove all of the left radiator shroud bolts. (FIG 2) The three bolts going into the tank will be reused and the one bolt going into the radiator will be replaced.
3. Pull the plastic louver off the radiator. (FIG 3)
4. Using an 8mm T-Handle or socket, remove the two rear front fender bolts. (FIG 4). Insert the two supplied large flat washers in-between the fender and the bottom triple clamp where each bolt was removed, then reinstall the rear fender bolts. (FIG 4.1 and FIG 4.2)
5. Remove the two radiator mounting bolts using an 8mm T-Handle or socket. (FIG 5)
6. Using the two bolts removed in step 5, install the provided part number 12-5022-02. The part number will face the frame and the small threaded holes will face forward. This can be tightened with an 8mm T-Handle or socket. (FIG 6)
7. Install the two supplied clip nuts onto the radiator as shown in (FIG 7).
8. Now install the supplied part number 12-5022-03 using the 6x16 hex head bolt and washer. Be sure that the bottom mounting hole is lined up and then tighten with an 8mm T-Handle or socket. (FIG 8)
9. Turn Page over → →



FIG 1



FIG 2


FIG 3


FIG 4


FIG 4.1


FIG 4.2

10. Hold the front grill part 12-5022-01 up to the inner and outer mounting pieces and start all 7 of the supplied 5x12 socket head bolts. Once these are all started you can then tighten them with a 4mm Allen wrench. (FIG 9)
11. Using the supplied 6x20 hex head bolt and the three bolts set aside in step 2, reinstall the radiator shroud. These can be tightened with an 8mm T-Handle or socket.
12. Reinstall the seat.
13. Have Fun and enjoy your next ride!

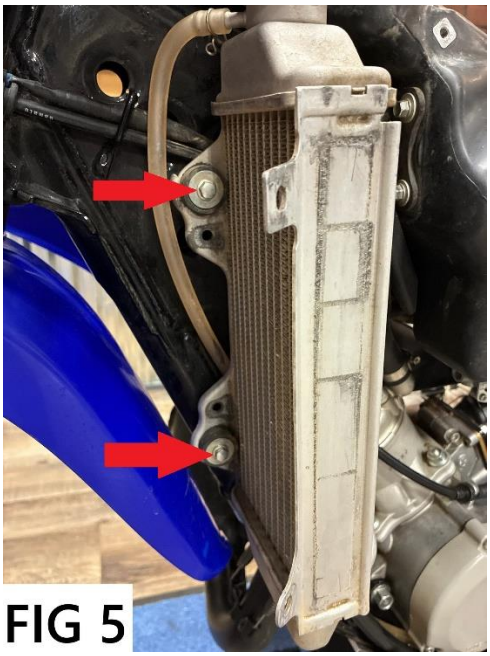
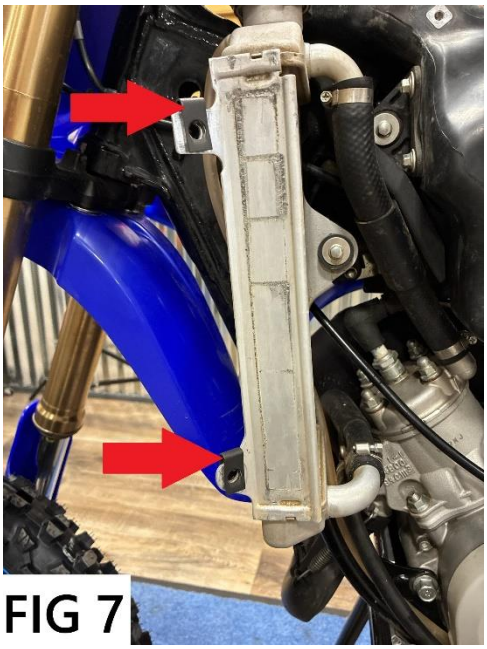

FIG 5


FIG 6


FIG 7

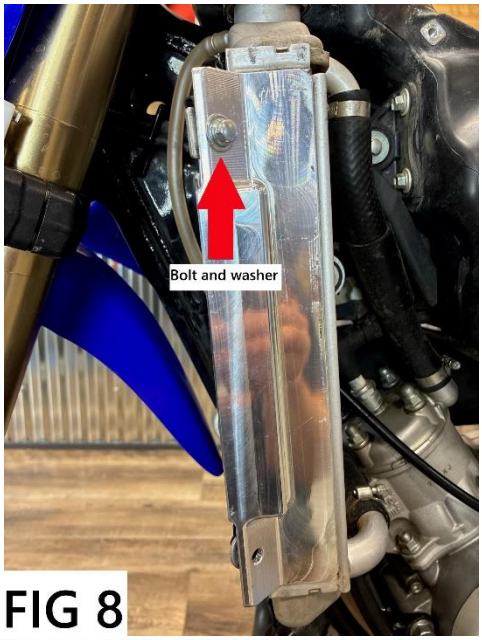
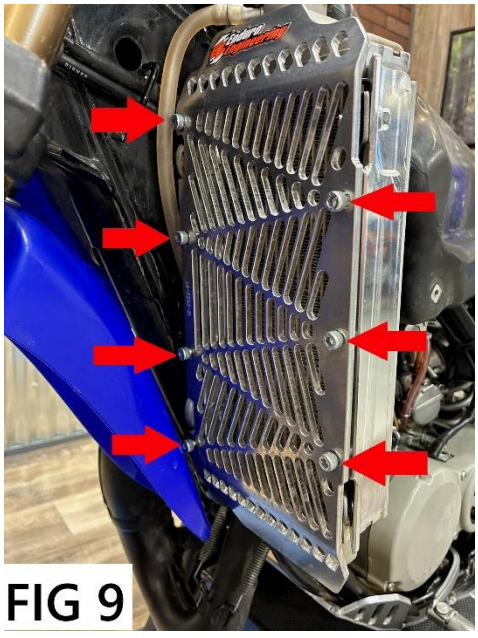


FIG 8


FIG 9

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician, Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after marker parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

Installation Instructions for Part # 12-5022

Quality Off-Road Motorcycle Products

Enduro Engineering

enduroeng.com//517.393.2421//info@enduroeng.com